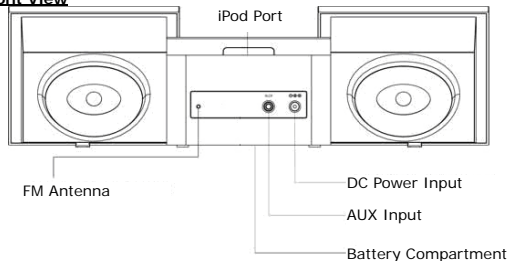


Package Contents

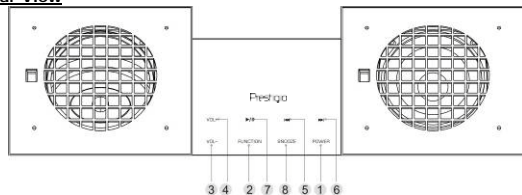
- | | |
|---------------------------|------------------|
| 1 Prestigio iPod™ Speaker | 2 Remote Control |
| 3 Power Adapter | 4 AUX Cable |
| 5 Quick Guide | 6 Warranty Card |

Device Overview

Front View

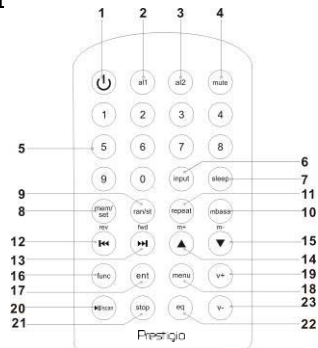


Rear View




- | | |
|-----------------------------------|---|
| 1 POWER: Power ON/OFF | 5 ◀◀: Previous track/Rewind |
| 2 FUNCTION: Mode switching | 6 ▶▶: Next track/Fast forward |
| 3 VOL-: Turn down volume | 7 ▶ : Play/Pause |
| 4 VOL+: Turn up volume | 8 SNOOZE: Enable snooze function |

Remote Control




 
 
- | | |
|---|---|
| 1. ⏻: Power ON/OFF | 13. fwd: Next track / Fast forward / Tune down |
| 2. al1: Alarm clock 1 settings | 14. m+: Scroll up / Increase frequency |
| 3. al2: Alarm clock 2 settings | 15. m-: Scroll down/ Decrease frequency |
| 4. mute: Turn up volume | 16. function: Mode switching |
| 5. 1-0: Numeric buttons | 17. enter: Confirm actions |
| 6. input: Numeric input | 18. menu: iPod™ menu function |
| 7. sleep: Sleep mode settings | 19. v+: Increase volume |
| 8. mem/set: memory/clock settings | 20. ▶ /scan: Play / Pause / Search |
| 9. ran/st: random/channel switching | 21. stop: stop |
| 10. repeat: repeat functions | 22. eq: Equalization effects |
| 11. mbass: Mega bass | 23. v-: Decrease volume |
| 12. rev: Previous track / Rewind / Tune up | |

Getting Started

 
1. Pull off the tab at the end of **remote control** to enable the unit.
2. Insert appropriate plug into the wall electrical outlet.
3. Insert **power jack** into the device.
4. Press  button to turn on the device/enter stand-by mode.

Music Function

 
Music Playback Modes

- **iPod™**: Insert iPod™ into designated port on top. Press **ent** button to start playing, **menu** button to return to previous page, and **m+/-** to select items.
- **AUX**: Press **func** button to select auxiliary (**AUX**) function. Connect external audio device with AUX cable provided. Turn on external audio device to start playback.
- **Radio**: Press **func** button to select tuner (**FM**) function. Press  to search for FM frequency manually. Press **mem/set** button to save current frequency in the FM list. Press and hold  for 2 seconds to search for the previous/next frequency automatically. Press and hold /scan button for 2 seconds to search for and save all available frequency in range. Press **m+/-** to select saved frequency

Playback Pause

Press /scan button to pause playback. Press the button again to resume.

Stopping Playback

Press /scan button to pause playback. Press **stop/band** button to stop music playback completely.

Selecting Track

Press  button to return/skip to previous/next track.

Adjusting Volume

Press **v-/v+** button to turn down/up volume.

Repeat/Random Playback

Press **repeat** button to toggle between repeat once, repeat all, and repeat off playback functions. Press **ran/st** button to enable/disable random playback.

Equalization Setup

Press **eq** button to toggle between **FLAT**, **STUDIO**, **ARENA**, **MONITOR**, and **CLUB** equalization modes.

Mega Bass Setup

Press **mbass** button to enable/disable mega bass function.

 
Extra Functions

Enabling/Disabling Sleep Mode

Press **sleep** button to cycle through time periods (from 0 minutes to 90 minutes) before entering sleep mode.

Adjusting Clock Time

During stand-by mode

 
- Press **mem/set** button to adjust clock time. Press  to adjust hour/minute digits and press **mem/set** button to confirm.
- Press **mem/set** button and press **input** button for direct time entry. Press number buttons in 4 digit 24 hour HHMM format to adjust clock time.

Enabling/Disabling Alarm Clock

Press **al1/al2** button to enable alarm clock and to cycle through alarm tones of **System Ring**, **iPod Music**, and **Radio**.

Adjusting Alarm Clock Time

During stand-by mode

- Press **al1/al2** button to adjust alarm clock time. Press  to adjust hour/minute digits and press **al1/al2** button to confirm.
- Press **al1/al2** button and press **input** button for direct time entry. Press number buttons in 4 digit 24 hour HHMM format to adjust clock time.

Enabling/Disabling Snooze Function

Press **SNOOZE** button on device when alarm clock is ringing to enable snooze function. The Alarm clock will be ringing in 5 minute time period. Press and hold **POWER** button on device to disable snooze function.

Charging iPod

Simply connect iPod™ to appropriate port on top of device.