

The background of the entire page is a light gray, stylized circuit board pattern. It features a complex network of lines representing traces, with various circular and rectangular shapes representing components and vias. The pattern is dense and covers the entire area.

USB 2.0 Card Reader / Writer

Version 1.0

Hardware Guide

DESCRIPTION:

The USB 2.0 Card Reader/Writer is an easily installed device, which only needs a USB interface to allow its use by any PC, Mac, or notebook computer. In addition, its mobility, strong data retention ability, and impressive appearance will provide you a brand new experience.

Check your packing listing:

USB2.0 Card Reader x 1

Mini USB Cable x 1

PS/2 to DC Jack Cable x 1 (or USB to DC Jack Cable x 1)

Hardware Guide x 1

CD driver x 1

**** If any of these items are missing from the product Retail package, contact your supplier immediately.**

Hardware Specification

Compliant with USB specification version 2.0

One Reader works with multiple media – Compact Flash, IBM Micro Drive, Smart Media, Multi Media Cards, SD Cards, and Memory Stick
Looks like removable disk drive - drag and drop files between the digital media cards and the computer

High transfer rate with USB interface: Full speed up to 60MB(480Mbits) per second.

Support Windows 98/SE, Windows ME, Windows 2000, Windows XP and MAC 8.6 / 9.x.

✍ Card Reader Installation:

Windows 98/SE

1. Power on the computer where you will connect the USB 2.0 Card Reader/Writer and make sure the USB port is enabled and working properly (Please don't plug your Card Reader/Writer into the USB port at this time).
2. Insert the Driver CD into the CD-ROM drive. Run the **Setup.exe** program located within folder "SCR2061\Windows" of the Driver CD.
3. The Install Shield Wizard will guide you through the installation process.
4. Restart your computer to complete driver installation.
5. Connect the ends of the USB extension cable into the Card Reader/Writer and the available USB port of your computer.
6. Your computer will automatically recognize the Card Reader/Writer and show the "New Hardware Found" windows. Windows will install the files needed to use your device.
7. Four Removable Disk drives with newly assigned drive letters will appear in My Computer. The Card Reader/Writer is ready for use.

Windows ME / Windows 2000/XP

The Card Reader/Writer is a driver-free device for Windows Me and Windows 2000/XP. You can connect it to an available USB port via the USB extension cable and don't have to install a special driver. Windows Me and Windows XP will detect the device and install all the associated files required for its use automatically.

MAC O.S. 8.6 and 9.x

1. Insert the Driver CD into the CD-ROM drive and double click the file SMSC Installer.sit (under folder “SCR206\Mac” on the Driver CD).
2. It will make “SMSC Installer” file.
3. Double click it and it will install all associated files required for its.
4. Restart computer.

Warning

Never remove or insert a memory card or disconnect the USB cable while data are being transmitted. To avoid improper shutdown, open the transmitted file from its new location to ensure transmission has been completed.